

WHYS OF SNOW PLOWS

1. Why do snow plows drive so slow?



Snow plows typically drive at 35mph, this is to ensure the salt is being distributed evenly throughout the lanes.

2. What is a Travel Advisory?

It's a caution to drivers to avoid travel whenever possible when winter weather makes driving difficult.



3. Why does the plow always bury my driveway?

When digging out your driveway, pile the snow on the right side, as the plow pushes snow from the left.



4. Why is my road always plowed last?

Your local highway and DPW departments must plow the highest priority roads first. These roads are the most traveled, including roads that contain hospitals, schools, and evacuation routes.



Department of
Transportation

Local Technical
Assistance Program

